

Balloon Assembly Instructions

Kit Includes



Uninflated balloon



Stem



Cup
(2 halves)



Support Stick
(Inflation Straw)



- 1)** To inflate balloon, carefully insert the white Stem through the white tab at the bottom of the balloon leaving a 1/16" of an inch outside of the flap.



2) Press the flap firmly to the Stem.

Align the two piece Cup on each side of the Stem, making sure the lip around the center of the Stem aligns with the grooves inside the Cups.

The Cups should close & meet forming a uniform circular Cup.



3) Insert the Support Stand Straw over the end of the Cups and push up until the Cups are firmly held together.



4) Carefully blow through the Straw until the balloon is completely filled. The valve inside the balloon will automatically close. There is no need close the opening at the end of the Support Stand Straw.

Be careful not to over inflate.